


CleverLoad Quick Reference Card

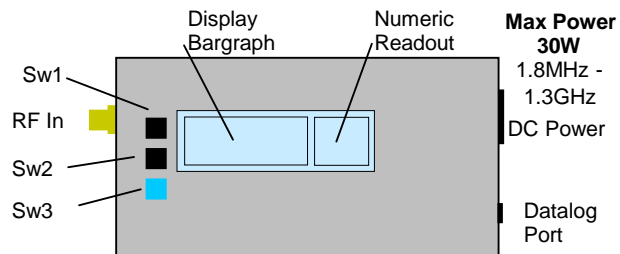

Switch Function When Measuring Power

Sw1 – Increments Off Time – if pushed for 2sec turns unit off
Sw2 – changes display readout to dBm or Watts
Sw3 – Turns the unit on. Once on invokes utilities menu

Switch Function In Utilities Menu

Sw1-Sw2 Navigate Up/ Dn menus or <- selects item
Sw3 –Selects menu item or option

Utilities Menu Items

- 1) Measurement Mode –Full Scale, Auto Scale, Peaking Mode
Peaking Mode Notes:
 - Sw3 invokes a submenu where Sw1 re-centers readings
 - Sw2 enables or disables auto centering
 - Pressing Sw3 again resumes measuring
- 2) Attenuator Mode – Change readout to for ext. atten 2-40dB
- 3) Off Interval – Auto pwr off/on. If on sets time from 2-59min
- 3) Backlight – Selects one of 16 levels
- 5) Temperature Alarm – set alarm threshold 30-55 deg.C
- 6) Change Hour – Set clock hour to change to or from DST
- 7) Power Off –Turn Unit Off